

# Viktor



Gebrauchsanweisung  
Operating instructions  
Mode d'emploi  
Istruzioni per l'uso  
Manual de instrucciones  
Gebruiksaanwijzing  
Brugsanvisning  
Käyttöohje  
Bruksanvisning  
Bruksanvisning



**Stadler Form®**

# Viktor



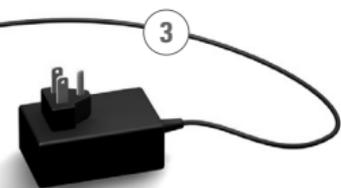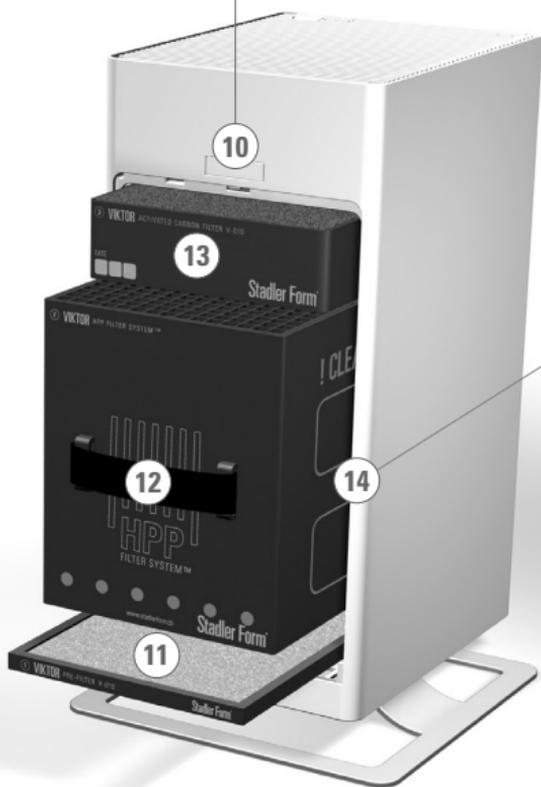



Congratulations! You have just purchased the exceptional air purifier VIKTOR. It will give you great pleasure and improve the indoor air for you.

As with all domestic electrical appliances, particular care is needed with this model also, in order to avoid injury, fire damage or damage to the appliance. Please study these operating instructions carefully before using the appliance for the first time and follow the safety advice on the appliance itself.

## **Description of the appliance**

The appliance consists of the following main components:

1. Housing
2. Door
3. Adapter
4. Zinc foot
5. On/off switch
6. Speed level button
7. Timer button
8. HPP™ filter monitoring light
9. Night mode button
10. Fragrance dispenser
11. Pre-filter
12. HPP™ filter
13. Activated carbon filter
14. Locking mechanism for the HPP™ filter

## **Important safety instructions**

Please read through the operating instructions carefully before you use the appliance for the first time and keep them safely for later reference; if necessary pass them on to the next owner.

- Stadler Form refuses all liability for loss or damage which arises as a result of failure to follow these operating instructions.
- The appliance is only to be used in the home for the purposes described in these instructions. Unauthorised use and technical modifications to the appliance can lead to danger to life and health.
- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only connect the cable to alternating current. Observe the voltage information given on the appliance.
- Do not use damaged extension cords.
- Do not run the power cord over sharp edges and make sure that it does not get trapped. Do not pull the plug from the socket with wet hands or by holding on to the power cord.
- Do not use this air purifier in immediate vicinity of a bath tub, a shower or a swimming pool (observe a minimum distance of 3 m). Place the appliance such that a person in the bath tub cannot touch the appliance.

- Do not place the appliance near a heat source. Do not subject the power cord to direct heat (such as a heated hotplate, open flames, hot iron sole plates or heaters for example). Protect power cords from oil.
- See to it that the appliance is properly positioned to ensure a high stability during its operation and make sure that no one can trip over the power cord.
- The appliance is not splash-proof.
- For indoor use only.
- Do not store the appliance outdoors.
- Store the appliance in a dry place inaccessible to children (pack the appliance).
- If the power cord is damaged, it must be replaced by the manufacturer or a repair shop authorized by the manufacturer or by similarly qualified persons in order to prevent damage.

## Functional overview

**Preliminary filter** The preliminary filter removes large dust particles and pollutants from the air, thereby protecting the secondary filter from severe soiling and optimising its functionality. The preliminary filter can be vacuum-cleaned when the need arises. Because the filter material becomes worn in the course of time, the filter should be replaced at approximately 6 month intervals.

**HPP™ Filter System** The HPP™ filter is the heart of the air purifier. It filters out viruses, bacteria, fine dust, pollen, dust mite excretions and mould fungi from the room air. Its high efficiency is ensured by the use of extremely powerful magnetic fields.

**Activated carbon filter** The activated carbon filter is able to adsorb airborne gases (unpleasant odours or tobacco smoke) thereby filtering them out of the air. Its capacity is finite therefore the filter should be replaced at approximately 6 month intervals depending on the level of air contamination caused by unpleasant odours and tobacco smoke. Should it become apparent, even before the end of the 6 month period, that the unpleasant odours are no longer being adequately eliminated, this is an indication that the filter should be replaced.

**Fragrance dispenser** The fragrance dispenser fleece may be moistened with a few drops of fragrance (max. 1-2 drops). Viktor will then give off the fragrance into the room air, generating a comfortable ambiance. Please note: if used in excess, fragrances may attack and damage plastic. Therefore, please add no more than 1-2 drops to the fleece, and do not add any more until the first fragrance is used up. If in doubt, please wash out and dry the fragrance dispenser and fleece.

**Speed levels** The air purifier has 5 different speed levels for different applications:

- Level 1 very quiet – e.g. for bedrooms overnight
- Level 2 quiet – for bedrooms or smaller rooms
- Level 3 for continuous daytime use in smaller rooms (25m<sup>2</sup>)
- Level 4 for continuous daytime use in larger rooms (up to 50m<sup>2</sup>), e.g. open-plan kitchen/living room
- Level 5 high-speed – for quick air purification or purification of heavily polluted air

**Timer** The appliance switches off automatically after 2, 4 or 8 hours as you wish. Ideal for air purification when you leave the home but would like to

have the air purified in your absence. The appliance can also be used without the timer and is suitable for continuous operation.

**Night mode** Today, many appliances incorporate LED lights which are unsuitable for night-time use in a bedroom. In night mode, the light intensity is reduced to a pleasant level.

### **Preparation for use/operation**

1. Place the Viktor air purifier on a flat surface in the desired area. Plug the adaptor (3) into a suitable electric socket.
2. Open the appliance on the back side (by pressing on the labelling «Push to open»). Remove the protective membrane from the activated carbon filter (13). Please check whether the locking elements of the HPP™ filter (14) are in a horizontal position (as shown in the figure). If this is not the case, please move them until the locking elements are in a horizontal position to secure the HPP™ filter.
3. Then switch on the appliance by pressing the on/off switch (5).
4. You can adjust the speed and thus the purification rate (volume per hour) by pressing the speed level selector switch (6) (one blue lamp for level 1, two blue lamps for level 2, etc.).
5. You can use the timer to set the desired cleaning time. To do this, press on the timer button (7). You can choose between the following periods: 2 hours, 4 hours or 8 hours. If you do not wish to use the timer, you may run the air purifier in continuous operation (no LED lamps illuminated).
6. If you find the lamps too bright (in a bedroom for example), you may reduce the light intensity by pressing the night mode key (9). You can choose between three different modes:
  - Normal mode (default mode)
  - Dimmed mode (push once)
  - Lights-out mode (push twice)
  - By pushing the dimmer button once more, you can go back into normal mode.
7. You may use the Viktor air purifier to distribute fragrances in the room. Please be as economical as possible in the use of fragrances, because excessive quantities may lead to malfunctions and damage to the appliance. To use fragrances, remove the fragrance container (10) from its mounting. Place no more than 1-2 drops of fragrance in the container and replace it in its designated position. If you wish to change the fragrance, you can wash out the fragrance container and fleece under running water.

### **Cleaning**

Prior to any maintenance work and after each use, switch off the appliance and withdraw the adaptor from the socket.

**Attention:** Never immerse in water (risk of short circuit).

- External surfaces should only be wiped off with a damp cloth and then dried well.
- The preliminary filter can be cleaned carefully with a vacuum cleaner. The filter should be changed at 6 month intervals.
- Fine particles, viruses and bacteria accumulate in the HPP™ filter over the course of time. You should therefore wash out this filter under cold running water at 2 month intervals. Please find the detailed cleaning in-

structions for the HPP™ filter on the left-hand side of the HPP™ filter. It is absolutely necessary to strictly observe the stated drying periods!

- The activated carbon filter cannot be cleaned and should be replaced at intervals of no more than 6 months. A space in which to record the date is printed on the activated carbon filter. Please enter the filter fitting date. Six months after the recorded date, replace the activated carbon and preliminary filters. The Combi Filter Pack V-010 is available from your household appliance dealer for this purpose.

### Repairs/disposal

- Repairs to electrical appliances must only be carried out by a qualified electrical technician. If improper repairs are carried out, the warranty lapses and all liability is refused.
- Never operate the appliance if the adaptor or plug is damaged, after it has malfunctioned, if it has been dropped or has been damaged in any other way (cracks/breaks in the casing).
- Do not push any object into the appliance. Do not disassemble the appliance.
- If the appliance is beyond repair, make it unusable immediately and hand it in at the collection point provided for the purpose.
- Do not dispose of electrical appliances in the domestic waste. Please use the communal collection points.
- Ask your local authority if you do not know where the communal collection points are located.
- If electrical appliances are disposed of thoughtlessly, exposure to the elements may cause hazardous substances to find their way into the ground-water and from there into the food chain, or to poison the flora and fauna for many years to come.
- If you are replacing the appliance with a new one, the seller is legally obliged to take back the old one at least free of charge for disposal.

### Specifications

Power (5 speed levels)	10-38 W
Dimensions	196 x 451 x 246 mm (width x height x depth)
Weight	4.9 kg
Shut off timer	2 h, 4 h, 8 h
Sound level	32.5-57 dB(A)
Complies with EU regulations	CE/ WEE / RoHS

**All rights for any technical modifications are reserved**





# Garantie/Warranty/Garantie/Garanzia/Garantía Garantie/Garanti/Takuu/Garanti/Garanti

## **2 Jahre Garantie**

Diese umfasst Konstruktions-, Produktions-, sowie Materialfehler. Ausgenommen sind sämtliche Verschleisssteile und unsachgemässe Benutzung oder Pflege.

## **2 years warranty**

This warranty covers defects of construction, production and material. All abrasion parts are excluded and also inappropriate usage or maintenance.

## **Garantie 2 ans**

Cette garantie couvre les défauts de construction, de fabrication et de matériaux. En sont exclues toutes les pièces d'usure et d'utilisation pas correcte ou mauvaise entretien.

## **2 anni di garanzia**

Questa garanzia copre difetti di costruzione, di produzione e di materiale. Tutte le parti di abrasione sono escluse e altresì l'uso o la manutenzione inappropriata.

## **2 años de garantía**

Esta garantía cubre los defectos de construcción, de fabricación y de materiales. Todas las piezas de desgaste están excluidas.

## **2 jaar garantie**

Deze omvat de constructie-, productie en materiaal fouten. Hier buiten vallen de gebreken ten gevolgen van nalatig gebruik of Interferentie op het toestel.

## **2 års garanti**

Garantien omfatter konstruktions-, produktions- og materialefejl. Sliddele og fejlbrug er ikke indbefattet.

## **2 vuoden takuu**

Takuu käsittää valmistus-, tuotanto- sekä materiaalivirheet. Takuun ulkopuolelle jäävät kaikki kuluvat osat sekä käyttöohjeiden vastainen tai huolimaton käyttö tai hoito.


## **2 års garanti**

Denne garantien dekker feil ved konstruksjon, produksjon og materialet anvendt. Alle reservedeler er utelatt fra garantien, samt uriktig bruk og vedlikehold.


## **2 års garanti**

Denna garanti täcker brister i tillverkning, produktion och material. Slitage och olämpligt användande eller underhåll är uteslutna.



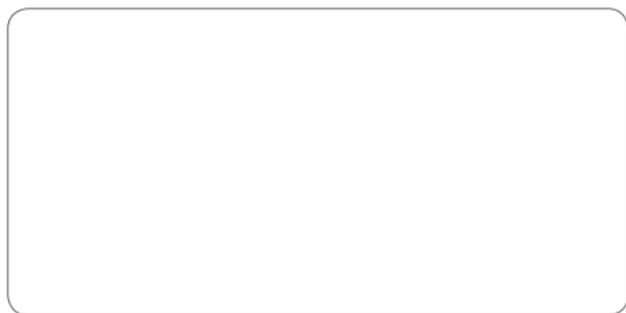

Stempel Verkaufsstelle / Retailer's stamp /  
Cachet du point de vente / Timbro del rivenditore /  
Sello del establecimiento de venta / Stempel verkoopadres /  
Butikkens stempel / Leima myyntikonttori  
Forhandlerstempel / Återförsäljarens stämpel

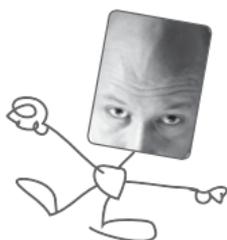

Design by Matti

**Thanks to** all people involved in this project: Del Xu for his engagement, ideas and organisation, Lin Shouming for the engineering and Wang Chaode for his CAD work, Claudia Fagagnini and Paul Gsell for the photos, Matti Walker for the timeless design and magic graphic work.

Martin Stadler, CEO Stadler Form Aktiengesellschaft